



SET UP A RW(Read/Write) PRODUCT (1/2)

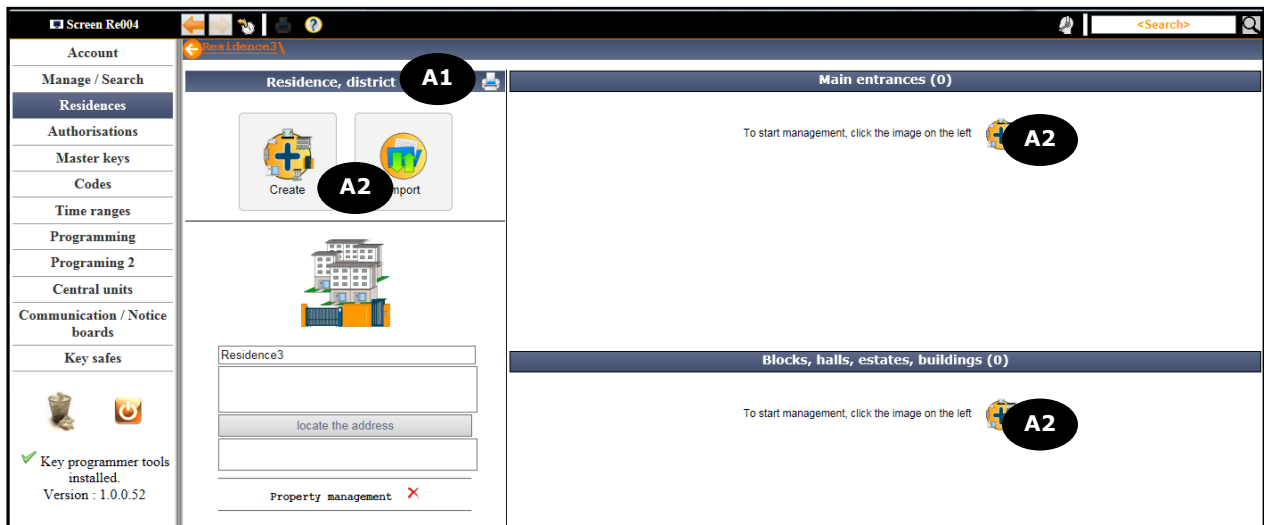

A1 Check that the current page is **<Residence, district>**.

A2 Click on one of the **<Create>** buttons, they are all similar.

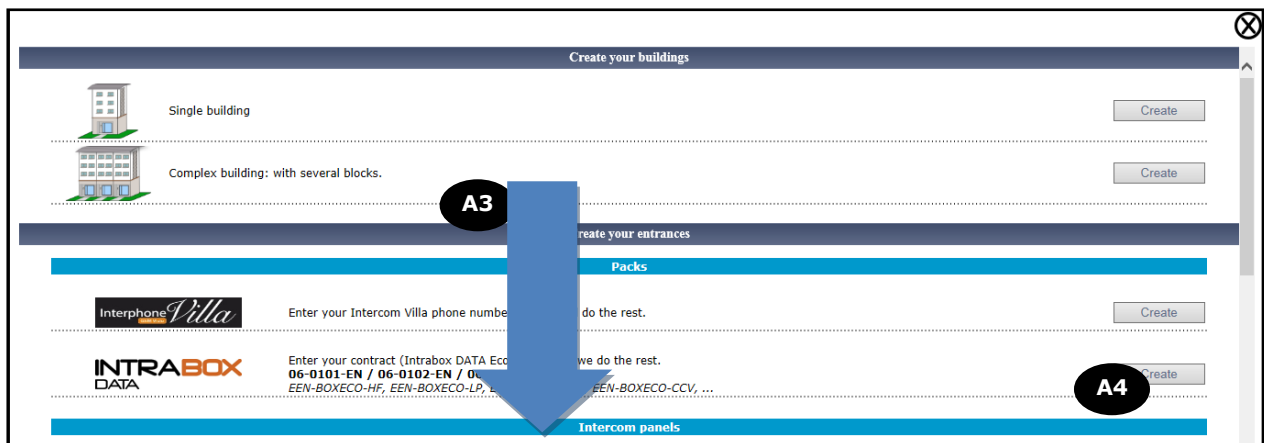

A3 Search your product in the section "RW Hardware (Read/Write)".

A4 Click on the **<Create>** button in front of the panel to create.

Warning :

If you use a 07-0106-XX (EEN-REC4) in **Read / Write mode**, you **must not select** the one in the section "HF Receivers" but in the "R/W" chapter.

SET UP A RW(Read/Write) PRODUCT (2/2)

Note :

If the residence structure is "complete", it is possible to create :

- A main entrance : The entrance permits to access to all blocks.
- A secondary entrance : The entrance permits to access to the block associated.

Main entrance

Entrance name: Entrance B **A5**

Intrate RW: Intratone RW

Serial number: 79987575 **A6**

A7 Save Cancel

A5 Enter the entrance name, it must help to find where is the access in the residence
EX : Block 13-24 Front Door, South Gate ...

A6 Enter the serial (barrel) number of the product. It is written on the cover of the product.

A7 Click on the **<Save>** button.

IF YOU SET UP A PRODUCT 03-0103-XX (EXX-C1P)

Central units list (2)

Name	Serial	type	Update
Central Unit 03-0103-XX	79983647		Not activated A9
Centrale 03-101	00008145		Not updated A9

Activation of central unit 'Central Unit 03-0103-XX'

Serial number: 79983647

Key programmer: ready

Fob: **A10**

Activate

A8 Click on the **<Central units>** button on the left bar.

A9 Click on the button **<Activation>**.

A10 Put a blank keyfob on the programmer and click on the **<Activate>** button.

Note :

If the central unit has not been activated with the "activation keyfob", all the mifare keyfobs will open the door.

As soon as you used the "activation keyfob" on the programmer, only the programmed keyfobs will open the door.