


MASTERKEY (1/2)

The Master keys and master mobilekeys permit to open one or several accesses, installed in one or several residence of the same account.

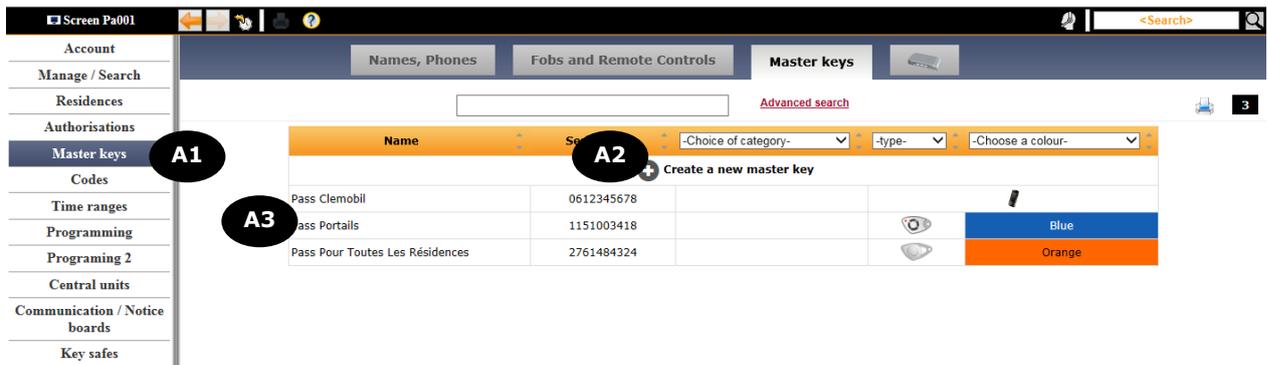

| Name | Serial number | Colour |
|---------------------------------|---------------|--------|
| Pass Clemobil | 0612345678 | Blue |
| Pass Portails | 1151003418 | Orange |
| Pass Pour Toutes Les Résidences | 2761484324 | Orange |

- | | |
|-----------|--|
| A1 | Click on the <Master keys > button on the left bar. |
| A2 | Click on the line <Create a new master key> to create a new master key or a master mobilekey. |
| A3 | Click on an existing masterkey to modify the existing access rights. |

MASTERKEY (2/2)

The Master Key

| | | | | |
|----------------|--|---|-------|--|
| Key programmer | A4 | | ready | |
| Name | A5 | <input type="text" value="Pass Portails"/> | | |
| Category | A6 | <input type="text" value="-Choice of category-"/> | | |
| Serial | A7 | <input type="text" value="1151003418"/> | | |
| Picture | | | | |
| Colour | A8 | <input type="text" value="Blue"/> | | |
| Time range | <input type="text" value="-Choose a time range-"/> | | | |

Master key mode definition

A9 By residence
 A9 By block
 A9 By entrance

| Residence | Yes/No |
|------------|--------------------------|
| Residence1 | <input type="checkbox"/> |
| Residence2 | <input type="checkbox"/> |

A10

| | |
|------------|---|
| A4 | Check if the USB Programmer is connected and ready if needed (RW entrances). |
| A5 | Enter the name of the masterkey owner or his company. |
| A6 | If needed, select the category of the masterkey. |
| A7 | Put the keyfob/remote on the USB programmer (RW entrances) or enter manually the serial number / telephone number (mobilekey) in the box <Serial> . |
| A8 | If needed, select a time range to restrain the access during time periods. |
| A9 | Choose the rights of the masterkey: <By residence> : All the entrances of the residence(s) selected. <By block> : Only the entrances of the block(s) selected. <By entrance> : Only the entrances selected. |
| A10 | Click on the <save> button to create the masterkey(keep the keyfob/remote on the USB programmer if there is RW accesses in the residence/block). |

Warning :

- The telephone of the mobilekey must not be blocked.
- If there is RW entrance(s) in the residence, the activation of the pass option is compulsory to use the masterkey. It can be done in the **<central units>** menu.